## WIFI SPEAKER SETTINGS MANUAL

- 1. Install the servers software and set up the server's ip address(Please refer to the video tutorial)
- 2. Connect the computer with speaker's WIFI "MIFI\_9F0C", enter the password "1234567890",
- 3、 and set the IP address of the speaker and server IP address using the Dev search tool

DevSearchTool.exe

All NetCard All N	letCards .		▼ Start Search Audi
IP Address Name	Mac 70:00:00	Version	
192, 186, 0, 100 05	10.00.00.	D4.E2.3E KV54_51	'_1080_V0_FH-V0IP_V2.3.16 bui
1			
,			
2			
Batch Reset	IP Batch Auto Alloca	atform	Audio Broadcast Ba
Batch Download Config Batc	IP Batch Manual Set	ting Set Tit	le
All NetCard	All NetCards		•
	L		
IP Address M	lame	Mac	
<b>V</b> 192 168 0 100 C	15		Version nu 2.3E AVSZ STP 1
☑ 192, 168, 0, 100 0	05	F0:00:00:B4:E	
		F0:00:00:B4:E	
✓         192.168.0.100         0           IP address s			
		F0:00:00:B4:E	
IP address s	Setting	F0:00:00:B4:E	
IP address s Start IP	✓ DHCP 1 192 . 168 . 0	F0:00:00:B4:E	
IP address s	✓ DHCP 1 192 . 168 . 0	F0:00:00:B4:E	
IP address s Start IP	♥ DHCP 1 192 . 168 . 0 255 . 255 . 255	F0:00:00:B4:E	
IP address s Start IP netmask	■ DHCP 1 192 . 168 . 0 255 . 255 . 255 192 . 168 . 0	<ul> <li>F0:00:00:B4.E</li> <li>2</li> <li>0</li> </ul>	
IP address s Start IP netmask Gateway DNS1	Image: Setting         Image: DHCP       Image: Setting         192       . 168       . 0         255       . 255       . 255         192       . 168       . 0         192       . 168       . 1	<ul> <li><b>FO</b>:00:00:B4:E</li> <li><b>∞</b></li> <li>2</li> <li>0</li> <li>1</li> </ul>	
IP address s Start IP netmask Gateway	Image: Setting         Image: DHCP       Image: Setting         192       . 168       . 0         255       . 255       . 255         192       . 168       . 0         192       . 168       . 1	F0:00:00:B4:E	
IP address s Start IP netmask Gateway DNS1 DNS2	Image: Setting         Image: DHCP       Image: Setting         192       . 168       . 0         255       . 255       . 255         192       . 168       . 0         192       . 168       . 1	F0:00:00:B4.E         . <t< td=""><td></td></t<>	
IP address s Start IP netmask Gateway DNS1 DNS2	♥ DHCP       1         192       . 168       . 0         255       . 255       . 255         192       . 168       . 0         192       . 168       . 0         192       . 168       . 0	F0:00:00:B4.E         . <t< td=""><td></td></t<>	
IP address s Start IP netmask Gateway DNS1 DNS2	♥ DHCP       1         192       . 168       . 0         255       . 255       . 255         192       . 168       . 0         192       . 168       . 0         192       . 168       . 0	F0:00:00:B4:E         .      <	
IP address s Start IP netmask Gateway DNS1 DNS2	♥ DHCP       1         192       . 168       . 0         255       . 255       . 255         192       . 168       . 0         192       . 168       . 0         192       . 168       . 0	F0:00:00:B4.E         . <t< td=""><td></td></t<>	

Address	Name	Mac	Version number	State	Running time	Mod
192, 168, 0, 100	05	F0:00:00:B4:E2:3E	AVSZ_SIP_1080_V0_FH-V0IP V2.3.16 build 20	Login success	14 Hour49 M	202
1					( TD	
				Be sure to modi		
				address only wh	en the status	
				shows " success	и	
			$\prec$			

Batch add exe			×
Server IP	47.114.104.168 1	talk cap vol	70
sub Server Addr	192.168.0.109	normal cap vol	70
Server	6900 def	ault:1220	43
power 2	open 🔻	calling vol	70
talk output	open 🔻	noise alarm	85
alarm output	open 🔻	noise alarm	
Name	05		
3 -			
Timing reboot	3:00:00	enable vid	yes 🔹
FTP ip		enable log	
FTP port	21	🔲 IO2 cap pic	
FTP user		FTP pwd	
FTF path			
enable aud ANS	in enable	IO timing-ctrl	10
		serial	9600
talk alarm	reversed control enable		10
alarm output	reversed control enable	alarm period(sec)	10
error	error check enable	IO_IN2 type	button 👻
		4	modify Cancel
empty means no chan	2e	4	

IP Address	Name	Mac	Version number	State	Running
✓ 192. 168. 0. 100		F0:00:00:B4:E2:3			
				5	

4 and then enter "192.168.100.1" in your computer browser, password is:admin



